



### **BlowHard BH-20 Battery Balancing Procedure**

This procedure can be used on fans with a low runtime with respect to expected results (i.e. 10 minutes on high). It is very important to repeat the process in step 1, and to not short the resting time in step 2. If this procedure is needed more than 2 or 3 times annually just to keep a good runtime, please contact us.

1. With the fan unplugged, turn the fan on low and let it run until the blade stops turning. Turn the fan off, wait for a minute, then turn it on low again and let it run until the blade stops turning again. Repeat this process 5 times or until you turn the fan on and the blade will not turn, which ever happens first.
2. Turn the fan off (make sure the knob is clicked off and the LED is off) and let it sit for a minimum of 96 hours (4 full days) without plugging it in.
3. When this rest period is over, plug the fan in. Let the fan charge – the light should start flashing red/green alternatively, or fast green. Continue to charge until the LED light stops blinking, should be no less than 3 hours.
4. Unplug the fan and time the run time. If the time is acceptable, the balancing procedure was successful. If you continue to experience short run times or have any questions regarding this procedure, please call for further assistance.

*Thank you for choosing BlowHard!*